

# HELMET FITTING/3

## JAW PADS



- Jaw pads should feel firm against the face.
- Insert needle into valve at exterior jaw flap.
- Inflate jaw pad. If non-inflatable jaw pads feel loose, change to a thicker size.
- If non-inflatable jaw pads feel tight, change to a thinner size.